

# M- POWER-4T-TRIM-PLATE

## ABOVE SURFACE TRIM PLATE INSTALL GUIDE

Distributed by



Mormax Company, Inc.  
8 Westchester Plaza  
Elmsford, NY 10523

914-699-0101  
sales@mormax.com  
mormax.com



**CUT HOLE IN BOTTOM**

1

Rout/cut bottom of wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".



**INSTALL OUTLET**

2

Insert outlet from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the outlet in place.

**NOTE: Max Torque Force when tightening nuts is:  
0.4 N-cm ~ 0.6 N-cm**



# M- POWER-4T-TRIM-PLATE


## ABOVE SURFACE TRIM PLATE INSTALL GUIDE

Distributed by



Mormax Company, Inc.  
8 Westchester Plaza  
Elmsford, NY 10523

914-699-0101  
sales@mormax.com  
mormax.com

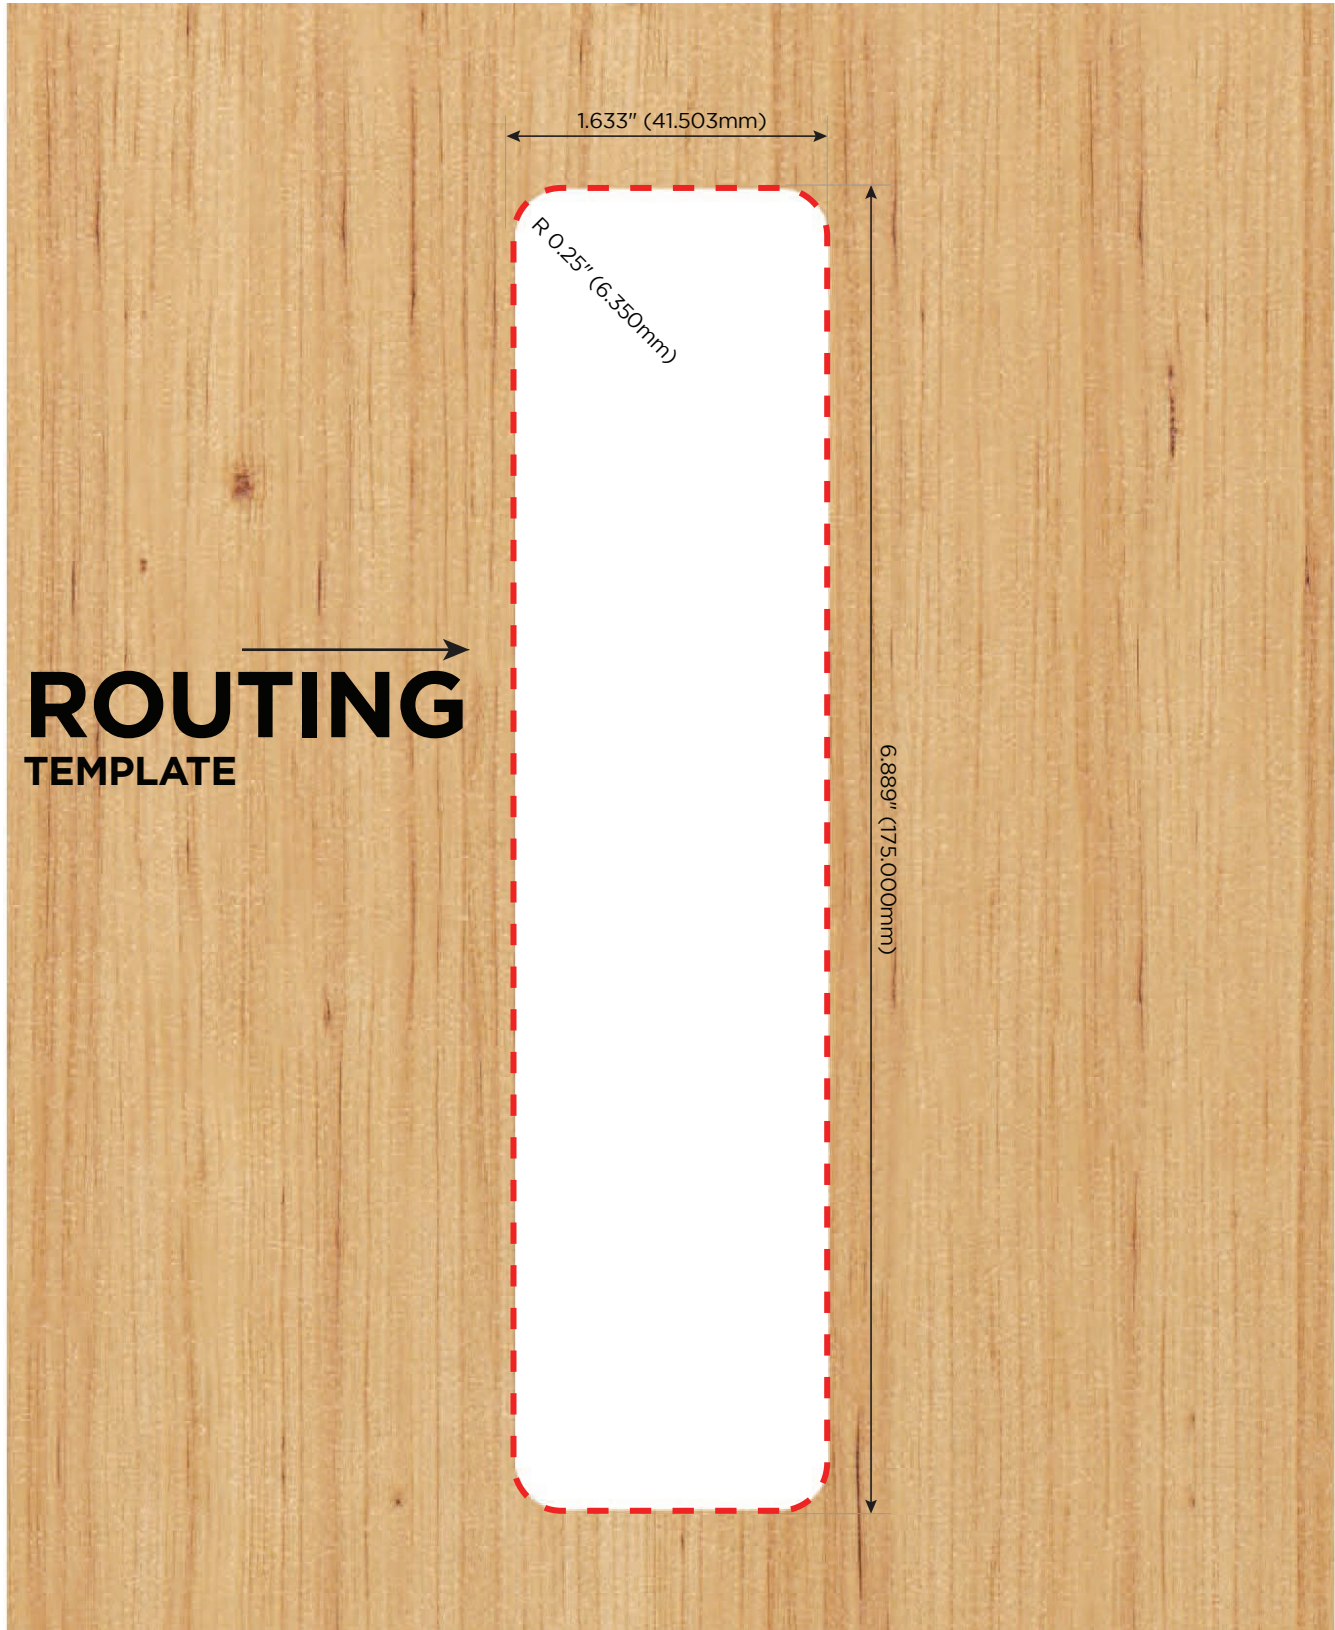



# M- POWER-4T-TRIM-PLATE

## ABOVE SURFACE TRIM PLATE INSTALL GUIDE

Distributed by



Mormax Company, Inc.  
8 Westchester Plaza  
Elmsford, NY 10523

914-699-0101  
sales@mormax.com  
mormax.com

